

Counter Top Setting Instructions



NEVER set tops directly on plate or bracket at an angle when setting tops.

ALWAYS set tops from opposite side of stud wall or from front of cabinet.



Chemical Concepts
410 Pike Road
Huntingdon Valley, PA 19006

Order online at counterbalanceshop.com or call 1.800.220.1966


These are general guidelines for installation methods, and may not apply to your application. Always consult a qualified contractor and follow their recommendations for proper installation.

MADE IN USA

CounterBalance®

CornerPlate

11.75" x 11.75" | CCH-CBCP

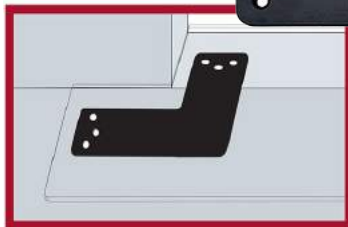

Check out our installation videos:
[youtube.com/user/ShopCB](https://www.youtube.com/user/ShopCB)



COUNTER

BALANCE®

The support you don't see.


Installation Instructions

The CounterBalance **CornerPlate** is designed to attach to stud walls, supporting overhangs on breakfast bars both forward and to the right or left of the half-wall opening. The **CornerPlate** can support up to a 13" overhang forward and up to 14" overhang to one side.



CornerPlate Routed Install

- 1) Place plate where support is needed making sure to leave 1/2" of wood stud wall and trace shape into stud wall.
- 2) Using the router with 1/4" bit, router out traced shape.

Supports should be spaced no more than 16" to 20" apart for optimum performance

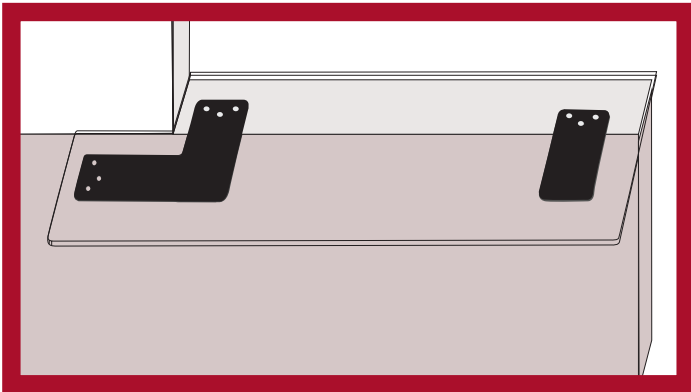

- 3) Place plate into routed area and mark holes for drilling, remove plate.
- 4) Drill pilot holes and place plate back into position and attach with the provided screws.
- 5) Repeat steps as necessary for additional plates.
- 6) Apply a silicone sealant to the top of the brackets to secure them to the underside of the counter surface and set countertop into position. Rated up to 500 lbs.

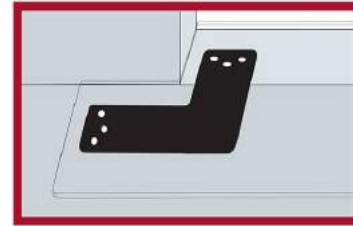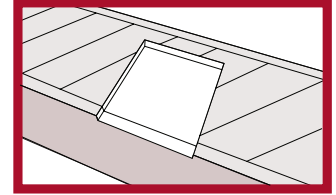

The CounterBalance **CornerPlate** is designed to provide cost efficient, quick, easy installs to support overhangs on stone and solid surface countertops. These products give your customers alternative to banging their knees on pricey corbels and provide superior support and security. These low-profile brackets are hidden from view offering a clean, modern look.